

**FRONT
BUS**



**LIGHTS
& REFLECTORS**

- o Proper Color (L-R-4-HL-HB-C)
 - o Working
 - o Not Broken
 - o Not cracked
- LEAKS**
- o Check for puddles
 - o Check for drips under engine

STEERING LINKAGE

- o Pitman arm, Drag link, Steering knuckle, Tie rods and tie rod ends
- o Not cracked, bent or broken
- o Castle nuts and cotter pins
- o Joints are not worn or loose

**STEERING GEAR
BOX**

- o Mounted properly
- o No missing parts, nuts or bolts
- o Lines and hoses not leaking or broken

**FRONT WHEEL
TIRES (I-C-D)**

- o Proper inflation – company or manufacturer specification
- o No bulges, cuts, or retreads
- o Minimum tread depth

of 4/32”

RIMS

- o Not bent, cracked, No welding repairs.

LUG NUTS

- o None are missing
- o Tight – no shiny threads, or rust trails

**OUTER HUB OIL
SEALS**

- o Not leaking, no missing bolts
- o Proper oil level

FRONT SUSPENSION

SHOCK ABSORBER

- o Mounted Securely
- o Not bent or dented
- o Not leaking

LEAF SPRINGS

- o Not shifted or out of place
- o No cracked springs

SPRING MOUNTS

- o Mounted securely- not cracked (front and rear)

U-BOLTS

- o Not cracked, no loose nuts

Not Shifted

FRONT BRAKES

HOSES AND LINES

- o Mounted securely
- o Not leaking
- o Not cracked or frayed

CHAMBER

- o Mounted securely
- o Not dented or cracked
- o Not leaking

**SLACK ADJUSTER &
PUSH ROD**

- o No more than 1 inch of

free play at the **push rod** with the brakes released.

- o Not bent, cracked, loose, or missing

DRUMS

- o Not cracked, or dented
- o No oil leaking from inner oil seal, free of debris

LININGS

- o Not less than ¼ inch in thickness

DRIVER’S MIRRORS

- o Clean and free of obstruction
- o Not cracked
- o Mounted securely

FUEL TANK

- o Mounted securely
- o Not leaking
- o Seal in cap OK

**LIGHTS &
REFLECTORS**

- o Clean and working / proper colors (front and back)

REAR AXLE

TIRES

- o Proper inflation - company or manufacturer specification.
- o No bulges or cuts, can have retreads
- o Minimum tread depth of 2/32”

RIMS

- o Not bent or cracked
- o No welding repairs

LUG NUTS

- o None missing
- o Tight – no shiny threads, or rust trails

OUTER AXLE SEAL

- o Not leaking, no missing bolts

SPACE OR SPACER

- o Check for objects between wheels
- o Check for proper spacing

REAR SUSPENSION

LEAF SPRINGS

- o Not shifted or out of place
- o Not cracked or missing

SPRING MOUNTS

- o Mounted securely – not cracked front, back

U-BOLTS

- o Not cracked, not shifted

**SHOCK ABSORBER (If
Equipped)**

- o Mounted Securely
- o Not bent, dented or not leaking

AIR BAGS (If Equipped)

- o Mounted Securely
- o Not leaking

REAR BRAKES

HOSES AND LINES

- o Mounted securely
- o Not leaking
- o Not cracked or frayed

CHAMBER

- o Mounted securely
- o Not dented or cracked
- o Not leaking

SLACK ADJUSTER

- o No more than 1 inch of free play at the push rod with the brakes released.

- o No loose, or missing parts

DRUMS

- o Not cracked, broken or dented
- o No oil leaking from inner oil seal, free of debris

LININGS

- o No cracked, broken or missing parts
- o Not less than ¼ inch in thickness

REAR Compartment

DOOR & Battery Box Door

- o Not bent, broken, or damaged
- o Close and latch securely
- o Hinges secure, no damage

**LIGHTS & REFLECTORS
(L-R-4-TL-BL-C)**

- o Working and proper color
- o Not broken, cracked, or missing

ENGINE COMPARTMENT

OIL LEVEL

- o Above add mark, no leaks

COOLANT

- o Check for level (sight glass)
- o Hoses attached and not leaking

All Coolant hoses not cracked or leaking

POWER STEERING

RESERVOIR

- o Mounted properly
- o Hoses attached and not leaking
- o Check for level and condition

WATER PUMP

- o Mounted Securely
- o No missing bolts or parts
- o Hoses attached securely
- o No leaking hoses or water pump
- o Belts no more than 3/4 inch of play
- o Belts not cracked or frayed

ALTERNATOR

- o Mounted Securely
- o No missing bolts or parts
- o Wires good connections, not frayed
- o Belt no more than 3/4 inch of play
- o Belts not frayed or cracked

AIR COMPRESSOR

- o Mounted Securely
- o No missing bolts or parts
- o No air leaks at lines
- o Check if gear or belt driven
- o Belt no more than 3/4 inch of play
- o Belts not cracked or frayed
- o Lines and hoses not leaking

UNDER VEHICLE DRIVE SHAFT

- o Not bent, or damaged
- o Coupling, U-joints appear secure

EXHAUST SYSTEM

- o Securely mounted
 - o Not dented or damaged
 - o Not leaking
- FRAME**
- o Not cracked, or damaged
 - o No missing bolts
 - o No illegal welds

ALL PASSENGER VEH.**Passenger Items****Passenger Entry Door**

- o Not damaged
- o Operate smoothly
- o Hinges and seals intact

Hand Rails

- o Not damaged
- o Secure

Entry

- o Not damaged or worn
- o steps clear

All Emergency Exits

- o Not damaged
- o Close securely from inside
- o Warning devices working

Seating

- o No broken seats
- o Frames attached to floor
- o cushions attached to seat frame

ALL VEHICLES ENGINE START**SAFETY BELT**

- o Latches securely
- o Mounted securely

EMERGENCY EQUIPMENT

- o Spare electrical fuses
 - o 3 reflective triangles
 - o Red and mounted securely
 - o Fire extinguisher
 - o Up to date
 - o Fully charged
 - o Securely mounted
- Emergency Kit & Body Fluid Kit**

- o nine item first aid kit
- o not missing

Start Motor

Bakes set in neutral

WATER TEMP GAUGE

- o Gauge is working (170 – 210 degrees)

OIL PRESSURE GAUGE

- o Gauge is working properly
 - o Normal oil pressure (20 - 45 PSI)
 - o Check that the warning light goes out
- AMMETER/VOLTMETER**

- o Gauge shows (12 – 14) volts to show battery is charging and that the generator or alternator is working properly

AIR GAUGE

- o Gauge is working properly

LIGHTING INDICATORS

- o Left and right turn signal

- o 4-Way Flashers
- o High beam indicator

HORNS

- o Electric (Street) horn works properly
 - o Air horn works properly
- HEATER & DEFROSTER**
- o Move switch from heat to defrost

- o Check for air flow

WINDSHIELD

- o Clean and free of obstruction
- o Not cracked or broken

MIRRORS

- o Clean and adjusted

WIPERS & WASHER

- o Working
- o Mounted securely to wiper arm
- o Rubber not torn
- o Washer sprays properly

PERFORM AIR BRAKE TEST**S. STATIC****A. APPLIED****L. LOW AIR WARNING****E. EMERGENCY BRAKE****G. GOVERNOR IN/OUT****P. PARK BRAKE/S****S. SERVICE / STEERING**

**A+ CDL Truck Rental
(918) 585 -1323**

ALL TEST WILL BE
PERFORMED
WITHOUT NOTES OR
PROMPTING

www.CDLRental.com

