

A+ CDL TRUCK RENTAL

"Renting Class A and Class B Trucks for CDL Testing"

IN CAB INSPECTION

SEATBELT - Not ripped, frayed and latches properly

EMERGENCY EQUIPMENT - (*FET*)

FIRE EXTINGUISHER - Up to date and mounted securely.

EXTRA FUSES

TRIANGLES - Three reflective triangles

SAFE START -Start the truck with the clutch in and shifter in neutral.

GAUGES

TEMPERATURE GAUGE - Rising to proper temperature

OIL PRESSURE - Rising to proper operating temperature range (psi)

VOLT GAUGE - Volt gauge is in green (12 to 14) volts.

AIR PRESSURE GAUGE - Working properly.

LIGHT INDICATORS - Check **LEFT RIGHT 4-WAYS HIGH BEAM**

HORNS - Check air horn and town horn (electronic horn)

HEATER AND DEFROSTER- Check for air flow on heater and defroster.

WINDSHIELD AND MIRRORS - Check windshield for cracks, chips and visibility.

Mirrors are mounted securely, clean and adjusted properly.

WIPERS - Turn on wipers, check blades are not cracked or worn.

WASHER- Washer fluid sprays properly.

AIR BRAKE TEST

1. Build air pressure to 120 PSI
2. Release all brakes: (push in yellow buttons. Rebuild air to 120 PSI) turn off engine.
Turn Key ON
3. Apply 90 pounds on the foot pedal: must not lose more than 3 PSI in 1 minute.
4. Fan off pressure with foot pedal: Warning light (and buzzer) should come on around 60 PSI.
5. Continue fanning off pressure: Red and yellow buttons should pop out between 20 -45 PSI
6. Start engine and raise RPMS to 1200 and rebuild pressure.
7. Push in yellow button and gently tug in low gear check if brakes hold.
8. Idle in low gear. Aprox. 5 mph Once you are moving take hands off wheel apply service brake to see if it pulls to one side or the other.